



---

# **Semi Automatic Cotton Candy Machine device instruction manual-V1.0**



# Semi Automatic Cotton Candy Machine

---





# Power on the device

---

1

Please connect the device to the power supply and turn on the leakage protection switch on the side.

Please connect the device to the power supply



Toggle up to power on the device



# Waiting for the device to initialize

1

Please connect the device to the power supply and turn on the leakage protection switch on the side.

**Note: If initialization fails, please contact after-sales engineers for assistance.-**

 
**FlopsyCandyFloss team will put you in contact with after sales engineers**

After the device is powered on, the LED light strip will light up and the system will start to boot



Waiting for system initialization

Initializing, please wait

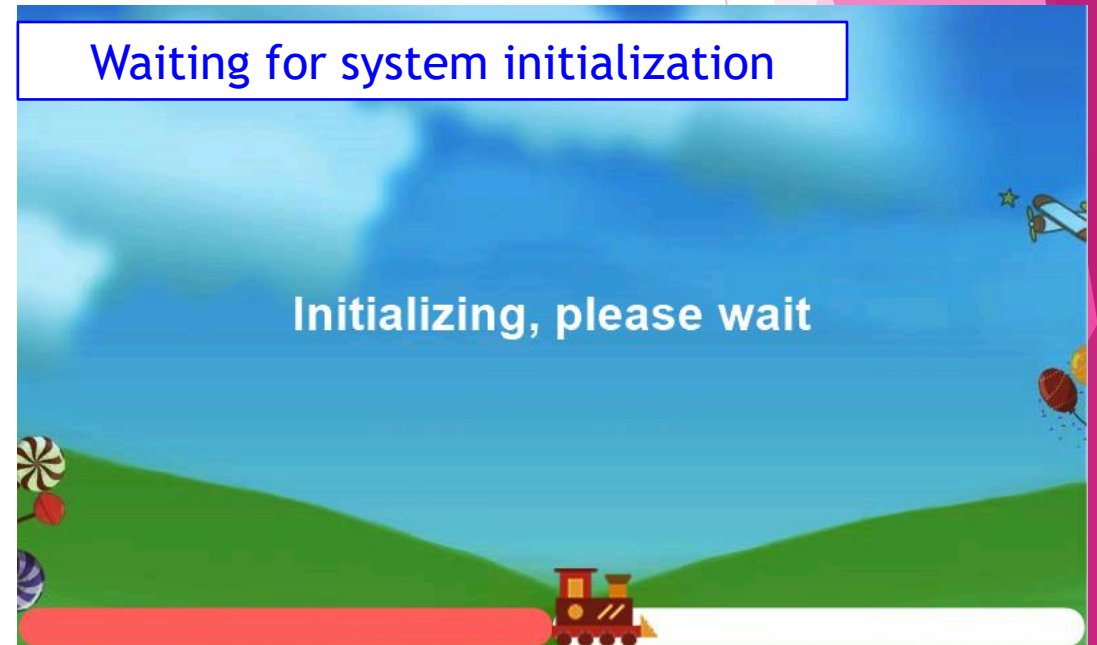




# Instruction of standby interface

This page will introduce the description of the standby screen.

1

 **Note: This UI interface icon may change with the version upgrade, and will not be notified**

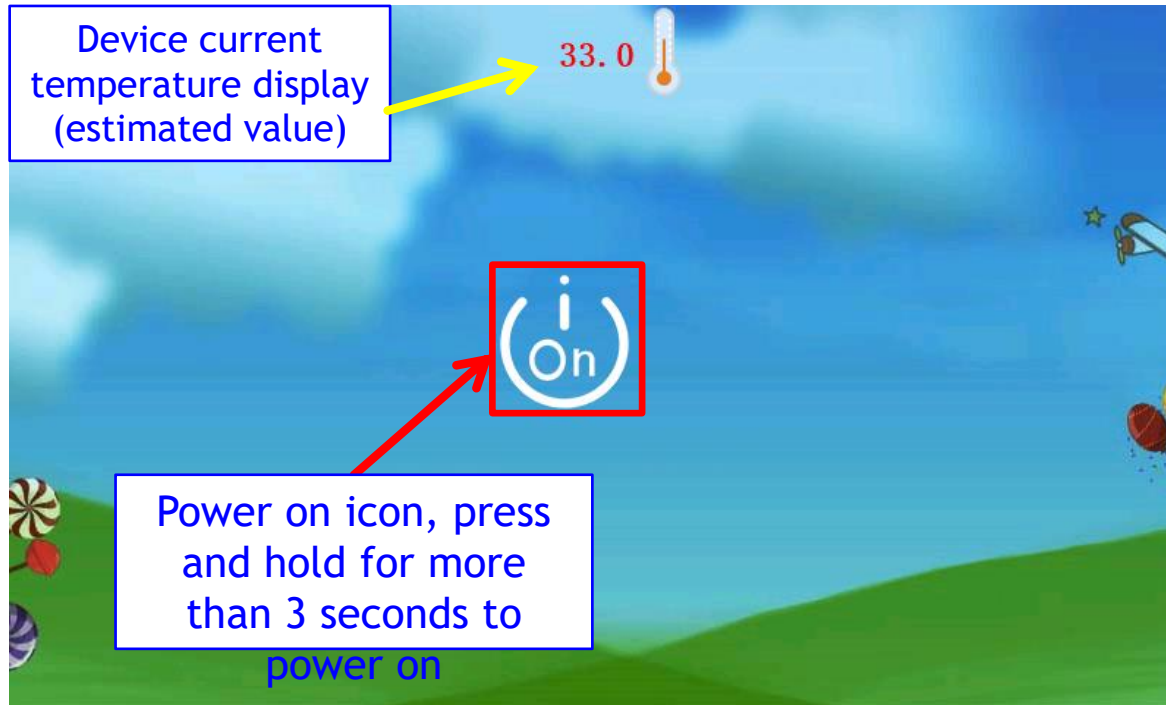





# Instructions for booting up the heating interface

After starting up, wait for the device to heat up interface instructions.

1

  Note: During the start-up phase of the device, it is not recommended to use the cleaning function when the temperature is lower than 175°C to prevent abnormalities in the device.

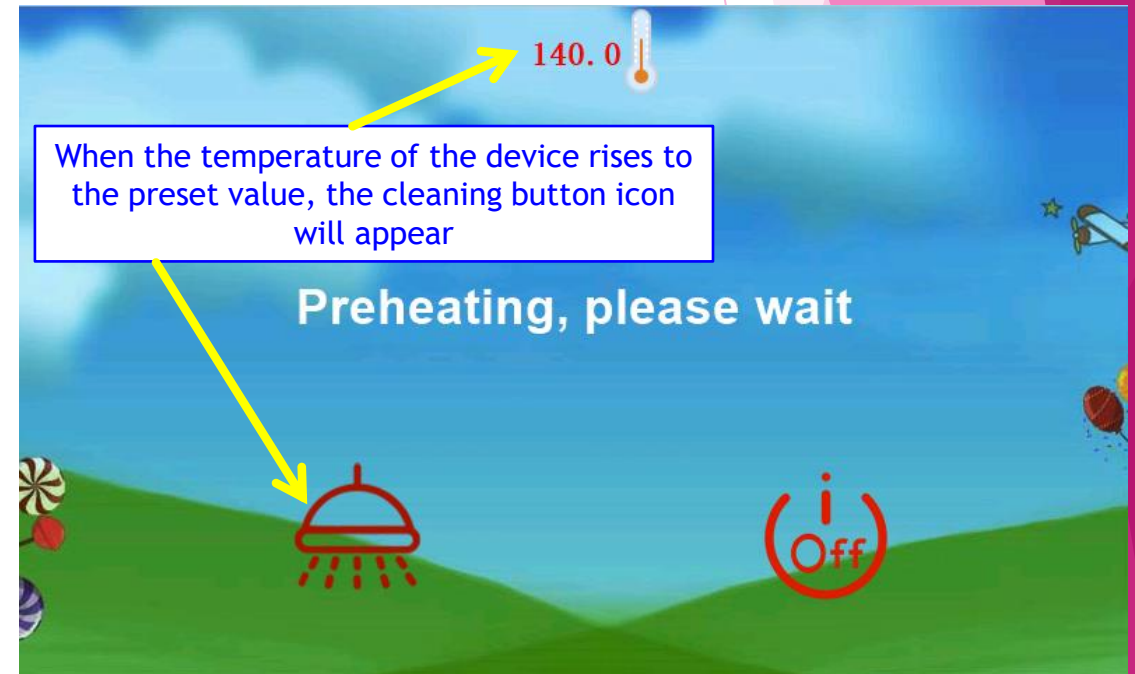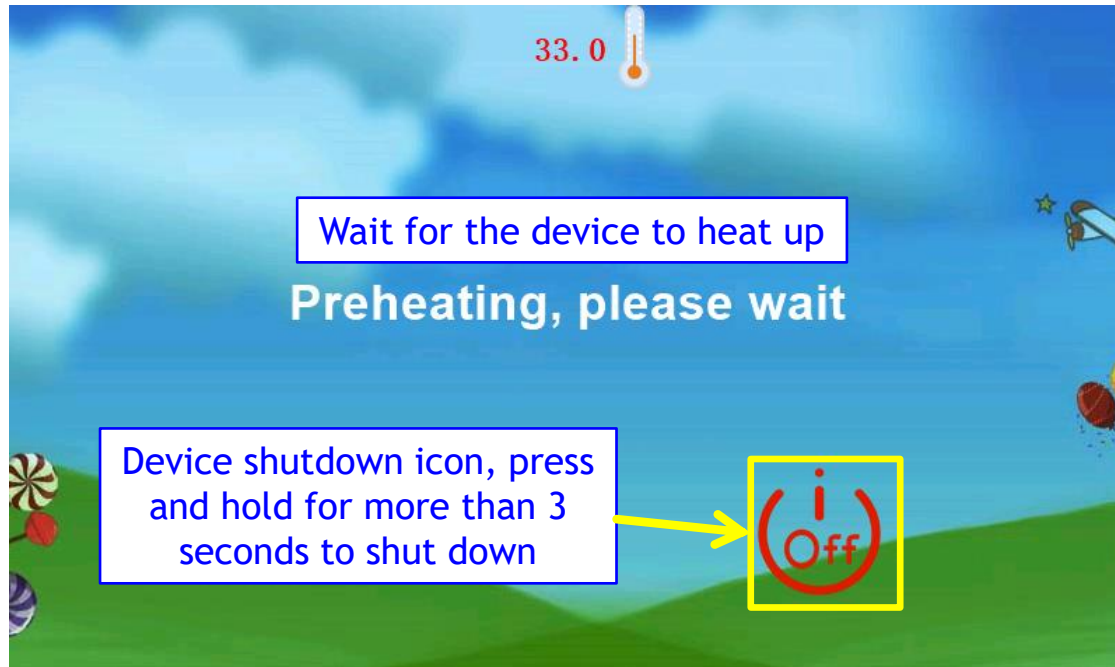



# Instructions for standby interface

When turning on the device for the first time, please wait until the temperature of the device rises to 195°C and then cools down to 185°C again before proceeding.

1

Note: When using for the first time, please press the cleaning button every 5-8 seconds until the device sprays water mist.



cotton candy color selection area.

After each change of water, please press the cleaning button every 5-8 seconds until the device sprays water mist.

If the device rises from room temperature to above 180°C each time, please wait for 5 minutes before using it.

To turn off the device, press and hold the power button for more than 3 seconds.



# Start making cotton candy

1 Click the colorful cotton candy icon, and the screen will jump to an interface reminding you to insert the paper stick into the robot arm of the device.

Note: Only instructions for making colorful cotton candy are shown here.

Click the colorful cotton candy icon

185.0

 


Return to the standby interface for making cotton candy.

185.0

Remind inserting stick into the robot arm  
Please put stick

GO

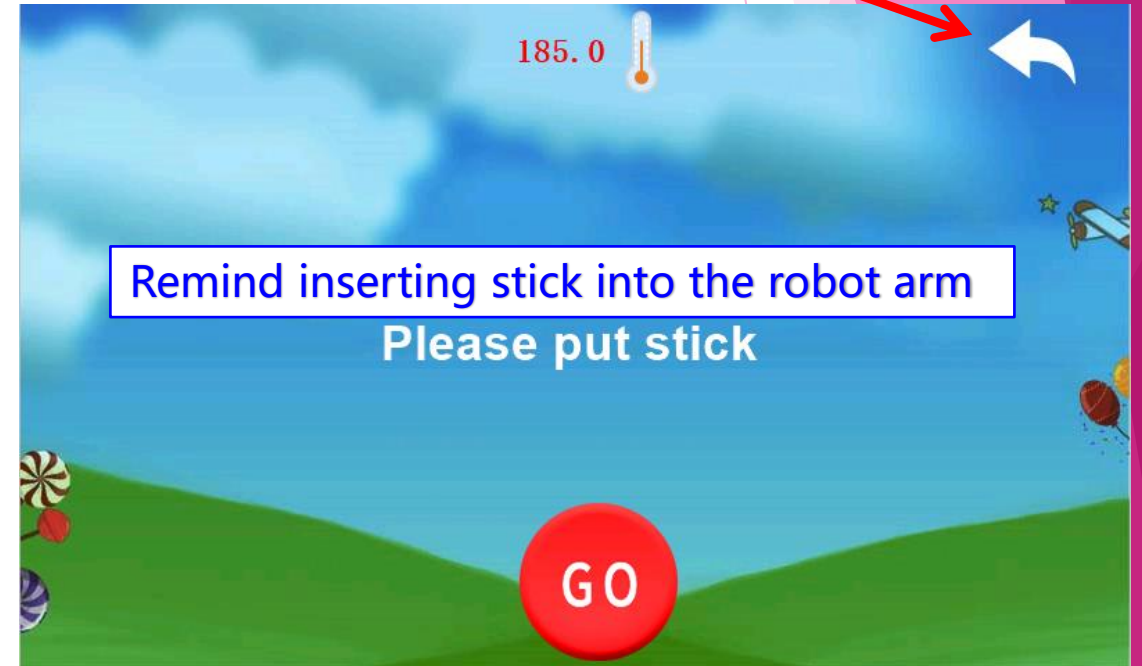





# Insert the paper stick into the robot arm

1

Take the paper stick and insert it into the robot arm, click the "GO" icon on the screen to confirm the start of making cotton candy.



 


# Wait for the device to heat up

1

After waiting for the device to finish heating up, it will start to enter the prompt interface for making cotton candy.

Forcibly stops cotton candy making.  
Do not use unless in special circumstances

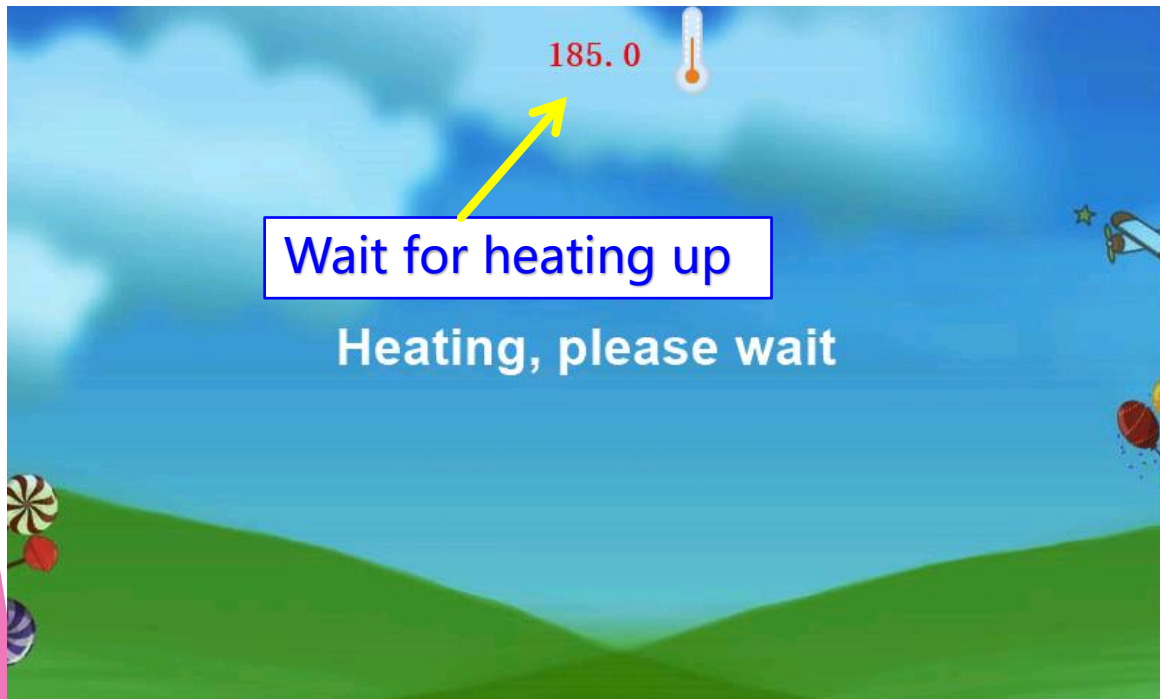

Progress indicator in cotton candy making.



# Finished making cotton candy

1

After waiting for the device to finish heating up, it will start to enter the prompt interface for making cotton candy.

When this page is displayed on the screen, it means that the cotton candy has been made.



Pull the paper stick upwards to remove the cotton candy





# Finished making cotton candy

- 1 After waiting for the device to finish heating up, it will start to enter the prompt interface for making cotton candy.



Display of colorful cotton candy.



Please take the cotton candy

Click the candy mark on the screen to return to the cotton candy color selection interface.



---

**Thanks for watching**